

4335EML



433EML



G4330E



Duplicabile con / Duplicable with:

Radiocomandi **AUTO-APPRENDENTI 2 e 4 canali** per codifica **FISSA a 433,92 MHz / 2 and 4 channels AUTO-LEARNING radio remotes for 433,92MHz FIX code**

**BLACK
REMOTES**



cod. 2162



cod. 2163

**open
touch**



cod. 2143



cod. 2155

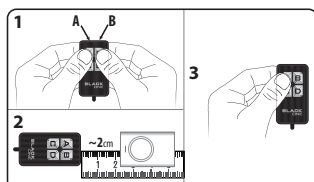
**Jolly
open**



cod. 2137



cod. 2157

2161 - BLACK ONE

132B2372



1A5477



1A5639-7



84330E



84330EML



84333EML



84335EML



8747EML



94330EML



94333E



94333EML



94334CE



94334E



94335E



94335EML



9747E

**Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione sulla centralina (94335E e 94334E)

1. Aprire la cassetta del motore.
2. Premere il tasto di programmazione, il led si accende.
3. Mantenere premuto il tasto del BLACK ONE programmato finché il led del motore inizia a lampeggiare.
4. Attendere 10 secondi per uscire dalla programmazione.

Programmazione sulla centralina (4330E e 4335E)

1. Avvicinarsi al pannello di controllo nella parte posteriore del motore.
2. Mantenere premuto il tasto del BLACK ONE programmato fino a fine programmazione.
3. Sul pannello di controllo, premere il tasto SMART, il led effettuerà un lampeggio.
4. Rilasciare il tasto del BLACK ONE e attendere 10 secondi per uscire dalla programmazione.

RadioreMOTE programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioreMotes as in figure 2 and press the key of the original radioreMOTE to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Programming on the central unit (94335E and 94334E)

1. Open the motor case.
2. Press the programming key, the led turns on.
3. Hold down the programmed key of BLACK ONE until the led of the motor starts blinking.
4. Wait 10 seconds to quit the programming.

Programming on the central unit (4330E and 4335E)

1. Get close to the control panel at the rear side of the motor.
2. Hold down the programmed key of BLACK ONE until the end of the programming.
3. Press SMART key on the control panel, the led will blink once.
4. Release the key of BLACK ONE and wait 10 seconds to quit the programming.