

BIX LS2



GOL4C



Duplicabile con / Duplicable with:

Radiocomandi **AUTO-APPRENDENTI 2 e 4 canali** per codifica **FISSA a 433,92 MHz / 2 and 4 channels AUTO-LEARNING** radio remotes for **433,92MHz FIX** code

**BLACK
REMOTES**



cod. 2162



cod. 2163



cod. 2143



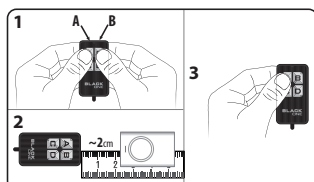
cod. 2155



cod. 2137



cod. 2157

2161 - BLACK ONE**BIX LG4****BIX LP2****GOL4****Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione a distanza

1. Posizionarsi vicino alla ricevente originale.
2. Premere e mantenere premuti contemporaneamente i tasti C e D del BLACK ONE finché il led si spegne; rilasciare i tasti.
3. Mentre il led lampeggia rapidamente, premere il tasto programmato; attendere che il led smetta di lampeggiare.

Programmazione sulla centralina

1. Premere il tasto PROG sul ricevitore, il led SIG si accende.
2. Premere il tasto del BLACK ONE programmato, il led SIG lampeggia a conferma dell'avvenuta programmazione.

Radioremove programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioremoters as in figure 2 and press the key of the original radioremote to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Remote programming

1. Place yourself near the original receiver.
2. Hold down C and D keys of BLACK ONE simultaneously until the led turns off; release the keys.
3. While the led is blinking quickly, press the programmed key; wait for the led to stop blinking.

Programming on the central unit

1. Press PROG key on the receiver. SIG led turns on.
2. Press the programmed key of BLACK ONE, SIG led blinks confirming the successful programming.