

TMB



Duplicabile con / Duplicable with:

Radiocomandi **AUTO-APPRENDENTI 2 e 4 canali** per codifica **FISSA a 433,92 MHz / 2 and 4 channels AUTO-LEARNING** radio remotes for **433,92MHz FIX** code


BLACK REMOTES




open touch



Jolly open

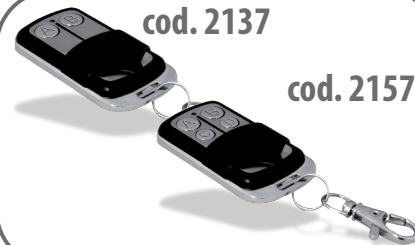

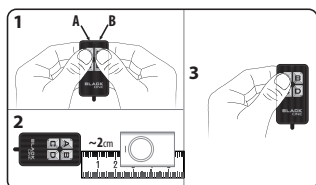2161 - BLACK ONE**AU1600 WOOD****AU1600****AU1680 WOOD****AU1680****DOMINO****Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.

2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.

3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.

PS: Per programmare i restanti tasti ripetere la procedura precedente.

Programmazione a distanza (rx AU02820-AU02920/30)

1. Posizionarsi nel raggio di ricezione della centralina.
2. Premere contemporaneamente (per 10-10s) i tasti 1 e 2 di un radiocomando originale precedentemente programmato sul ricevitore. Il led sul ricevitore si accende a luce fissa.
3. Premere e rilasciare un tasto del radiocomando originale.
4. Premere e rilasciare il tasto del BLACK ONE programmato.

Programmazione a distanza (altre riceventi)

1. Posizionarsi nel raggio di ricezione della centralina.
2. Premere contemporaneamente (per 6s) i tasti 1 e 2 di un radiocomando originale precedentemente programmato sul ricevitore. Rilasciare i tasti.
3. Premere il tasto del BLACK ONE programmato.

NOTA: per acquisire radiocomandi rolling code sul ricevitore deve essere rimosso il jumper JP2.

Programmazione sulla centralina

1. Premere il pulsante Learn sul ricevitore, il Led rosso si accenderà.
2. Entro 6s tenere premuto il tasto del BLACK ONE programmato, finché si spegne il led della centralina.

Radioremove programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
2. Place the radioremoves as in figure 2 and press the key of the original radioremove to be duplicated until the led of BLACK ONE starts blinking quickly.
3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.

P.S.: Please repeat the previous procedure to program the remaining keys.

Remote programming (rx AU02820-AU02920/30)

1. Place yourself inside the reception range of the central unit.
2. Hold down simultaneously (for 10-10secs) 1 and 2 keys of an original radioremove previously programmed on the receiver. the led of the receiver will turn on steadily.
3. Press and release a key of the original radioremove.
4. Press and release the programmed key of BLACK ONE.

Remote programming (other receivers)

1. Place yourself inside the reception range of the central unit.
2. Press simultaneously (for 6secs) 1 and 2 keys of an original radioremove previously programmed on the receiver. Release the keys.
3. Press the programmed key of BLACK ONE.

NOTE: you have to remove JP2 jumper to acquire rolling code radioremoves on the receiver.

Programming on the central unit

1. Press Learn key on the receiver, the red Led will turn on.
2. Hold down the programmed key of BLACK ONE within 6secs, until the led of the central unit turns off.