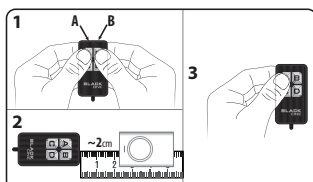


2161 - BLACK ONE**E940M****E943M****E945M****Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione sulla centralina

1. Premere e mantenere premuto il tasto del BLACK ONE programmato fino alla fine della procedura.
2. Premere il tasto LEARN sulla centralina e rilasciarlo subito.
3. La centralina emetterà 2 click per conferma.

RadioreMOTE programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioreMotes as in figure 2 and press the key of the original radioreMote to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Programming on the central unit

1. Hold down the programmed key of BLACK ONE until the end of the procedure.
2. Press LEARN key on the central unit and release it at once.
3. The central unit will emit 2 clicks for confirmation.