


2161 - BLACK ONE

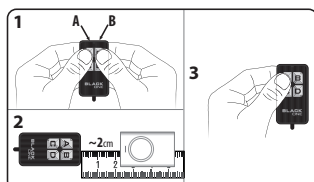

ERA ONE



ERA-FLOR



FLO-R



INTI



ONE



SMILO



VERY-VR



Programmazione radiocomando

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione a distanza

1. Posizionarsi vicino alla ricevente originale.
2. Premere e mantenere premuti contemporaneamente i tasti C e D del BLACK ONE finché il led si spegne; rilasciare i tasti.
3. Mentre il led lampeggia rapidamente, premere il tasto programmato; attendere che il led smetta di lampeggiare.

Programmazione sulla centralina (standard)

1. Premere e rilasciare il tasto P1 sul ricevitore, il led L1 del ricevitore si accende per 5s.
2. Tenere premuto il tasto del BLACK ONE programmato finché il led L1 del ricevitore si spegne.
3. Rilasciare il tasto del BLACK ONE ed attendere 1s
4. Premere di nuovo il tasto del BLACK ONE finché il led L1 si spegne, rilasciare il tasto del radiocomando. Il led del ricevitore emetterà 3 lampeggi di conferma.

RadioreMOTE programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioreMotes as in figure 2 and press the key of the original radioreMOTE to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Remote programming

1. Place yourself near the original receiver.
2. Hold down C and D keys of BLACK ONE simultaneously until the led turns off; release the keys.
3. While the led is blinking quickly, please press the programmed key. Wait for the led to stop blinking.

Programming on the central unit (standard)

1. Press and release P1 key on the receiver, L1 led of the receiver turns on for 5secs.
2. Hold down the programmed key of BLACK ONE until L1 led of the receiver turns off.
3. Release the key of BLACK ONE and wait 1sec
4. Press the key of BLACK ONE again until L1 led turns off. Release the key of the radioreMOTE. The led of the receiver will blink 3 times for confirmation.