

M512



NOVOTRON 202 MB



 
**Duplicabile con / Duplicable with:**

Radiocomandi **AUTO-APPRENDENTI 2 e 4 canali per codifica FISSA a 433,92 MHz / 2 and 4 channels AUTO-LEARNING radio remotes for 433,92MHz FIX code**


**BLACK  
REMOTES**




**open  
touch**

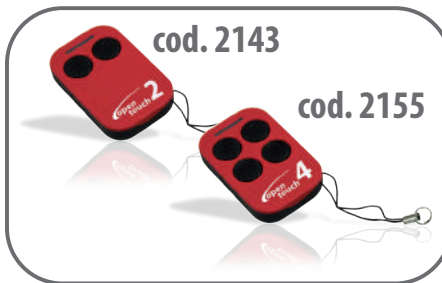

**Jolly  
open**

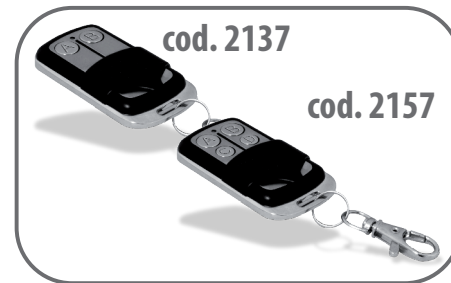 

## 2161 - BLACK ONE

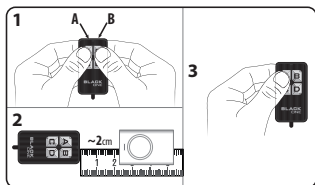 **Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
  2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
  3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

**Programmazione sulla centralina**

1. Premere il tasto sulla centralina, il led inizia a lampeggiare.
2. Tenere premuto il tasto del BLACK ONE programmato, circa 3 secondi, finché il led inizia a lampeggiare rapidamente.

**Programmazione sul motore**

1. Identificare sul motore i 3 tasti di programmazione.
2. Premere il tasto ovale finché sul display compare "1".
3. Tenere premuto il tasto del BLACK ONE programmato per almeno due secondi.
4. Premere il tasto ovale sul motore, finché sul display compare "0".
5. Attendere 15 secondi per uscire dalla modalità di programmazione.

**RadioreMOTE programming**

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
  2. Place the radioreMotes as in figure 2 and press the key of the original radioreMote to be duplicated until the led of BLACK ONE starts blinking quickly.
  3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

**Programming on the central unit**

1. Press the button on the central unit, the led begins to flash.
2. Press the programmed button of the BLACK ONE and hold for approximately 3 seconds until the led begins to flash quickly.

**Programming on the motor**

1. Identify the 3 programming keys on the motor.
2. Press the oval button until "1" appears in the display.
3. Hold down the BLACK ONE button programmed for at least two seconds.
4. Press the oval button on the motor until "0" appears in the display.
5. Wait 15 seconds to exit programming mode.