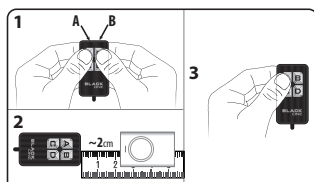


**2161 - BLACK ONE****433-HD BRAVO****TE4433H BLUE****Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
  2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
  3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

**Programmazione a distanza**

1. Posizionarsi vicino alla ricevente originale.
2. Premere e mantenere premuti contemporaneamente i tasti C e D del BLACK ONE finché il led si spegne; rilasciare i tasti.
3. Mentre il led lampeggia rapidamente, premere il tasto programmato; attendere che il led smetta di lampeggiare.

**Programmazione sulla centralina**

1. Sulla centralina premere il tasto:  
SW1 per programmare il CH1.  
SW2 per programmare il CH2.  
Il led della centralina si accende.
2. Tenere premuto il tasto dello BLACK ONE programmato.  
Il led della ricevente effettua due lampeggi di conferma, rilasciare il tasto.

**RadioreMOTE programming**

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
  2. Place the radioreMotes as in figure 2 and press the key of the original radioreMote to be duplicated until the led of BLACK ONE starts blinking quickly.
  3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

**Remote programming**

1. Place yourself near the original receiver.
2. Hold down C and D keys of BLACK ONE simultaneously until the led turns off; release the keys.
3. While the led is blinking quickly, press the programmed key; wait for the led to stop blinking.

**Programming on the central unit**

1. Press the following keys of the receiver:  
SW1 to program CH1  
SW2 to program CH2  
The led of the central unit power on.
2. Hold down the programmed key of BLACK ONE. The led of the receiver will start 2 blink. Release the key.