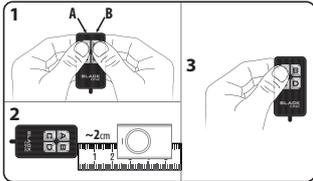


2161 - BLACK ONE

**Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione a distanza

1. Posizionarsi vicino alla ricevente originale.
2. Premere e mantenere premuti contemporaneamente i tasti C e D del BLACK ONE finché il led si spegne; rilasciare i tasti.
3. Mentre il led lampeggia rapidamente, premere il tasto programmato; attendere che il led smetta di lampeggiare.

Programmazione sulla centralina (1° radiocomando)

ATTENZIONE: EFFETTUANDO QUESTA PROCEDURA SI PERDERANNO TUTTI I CODICI MEMORIZZATI PRECEDENTEMENTE SUL RICEVITORE.

1. Togliere l'alimentazione al ricevitore.
 2. Tenere premuto il tasto di cancellazione e alimentare il ricevitore finché sia il led che il beep si sono spenti.
 3. Posizionarsi nel raggio di ricezione della centralina.
 4. Premere e mantenere premuti contemporaneamente i tasti A e C del BLACK ONE finché il led si spegne; rilasciare i tasti.
 3. Mentre il led lampeggia, premere il tasto programmato finché il ricevitore emmette una serie di beep per poi riprendere il suono continuo.
 6. Attendere la fine del segnale acustico.
- Per memorizzare ulteriori radiocomandi seguire la procedura Programmazione a distanza (paragrafo precedente).*

RadioreMOTE programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioreMotes as in figure 2 and press the key of the original radioreMote to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Remote programming

1. Place yourself near the original receiver.
2. Hold down C and D keys of BLACK ONE simultaneously until the led turns off; release the keys.
3. While the led is blinking quickly, press the programmed key; wait for the led to stop blinking.

Programming on the central unit (1st radioreMote)

CAUTION: FOLLOWING THIS PROCEDURE ALL THE CODES PREVIOUSLY STORED IN THE RECEIVER WILL BE DELETED.

1. Remove power supply from the receiver.
 2. Hold down delete key and supply power to the receiver until both the led and the beep turn off.
 3. Place yourself inside the reception range of the central unit.
 4. Hold down A and C keys of BLACK ONE simultaneously until the led turns off; release the keys.
 5. While the led is blinking, press the programmed key until the receiver beeps a few times and then it sounds continuously again.
 6. Wait until the end of the beep.
- Please follow the Remote programming procedure (previous paragraph) to store more radioreMotes.*