


2161 - BLACK ONE

MHZ 07 RC

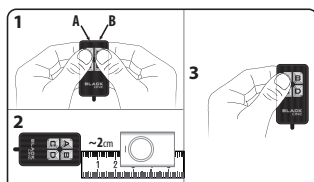

QUARZ SAW

**Programmazione radiocomando**

1. Premere e mantenere premuti contemporaneamente i tasti A e B del BLACK ONE finché il led inizia a lampeggiare; rilasciare i tasti.
 2. Posizionare i radiocomandi come in figura 2 e premere il tasto del radiocomando originale da duplicare finché il led del BLACK ONE inizia a lampeggiare rapidamente.
 3. Con il led del BLACK ONE lampeggiante, premere il tasto dove si vuole programmare il tasto appena acquisito.
- PS: Per programmare i restanti tasti ripetere la procedura precedente.*

Programmazione a distanza (necessita di un radiocomando funzionante)

1. Premere contemporaneamente i primi due tasti del radiocomando originale.
2. Entro 5 secondi, premere il tasto del BLACK ONE programmato.

Programmazione sulla centralina

1. Inserire il ponticello "1" sulla centralina.
 2. Premere e mantenere premuto il tasto sulla centralina.
 3. Premere e mantenere premuto il tasto del BLACK ONE programmato, finché il led della centralina si accende a luce fissa; rilasciare prima il tasto del BLACK ONE e successivamente il tasto della centralina.
 4. Rimuovere il ponticello "1" sulla centralina.
- In caso si devono programmare anche i restanti canali, ripetere tutti i punti precedenti inserendo, però, il ponticello sul canale da programmare.*

RadioreMOTE programming

1. Simultaneously press and hold in the A and B buttons of the BLACK ONE until the LED begins to flash.
 2. Place the radioreMotes as in figure 2 and press the key of the original radioreMOTE to be duplicated until the led of BLACK ONE starts blinking quickly.
 3. While the led of BLACK ONE is blinking, press the key where you want to program the key just acquired.
- P.S.: Please repeat the previous procedure to program the remaining keys.*

Remote programming (requires a properly working radioreMOTE)

1. Press the first two keys of the original radioreMOTE simultaneously.
2. Press the programmed key of BLACK ONE within 5 seconds.

Programming on the central unit

1. Insert jumper "1" on the central unit.
 2. Hold down the key on the central unit.
 3. Hold down the programmed key of BLACK ONE until the led of the central unit turns on steadily; release the key of BLACK ONE first and then the key of the central unit.
 4. Remove jumper "1" on the central unit.
- In case you want to program the remaining channels as well, repeat all the previous steps but please insert jumper on the channel to be programmed.*